


INSTALLATION & MAINTENANCE INSTRUCTIONS

TOOL BALANCER


MOUNT REEL 1a

Mount reel to secure structure directly above work.

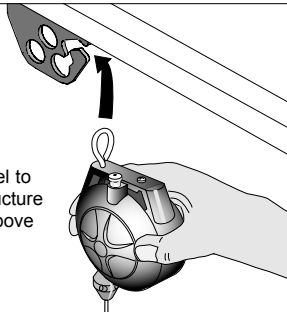



1b

NOTE:
Disregard this step if reel is pre-mounted to Torq-Arm or other equipment.

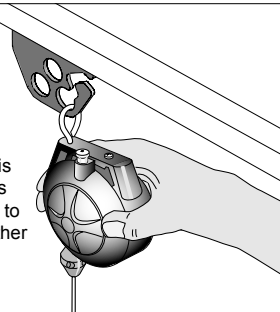


ATTACH TOOL 2a

Raise tool and attach to hook on end of cable.

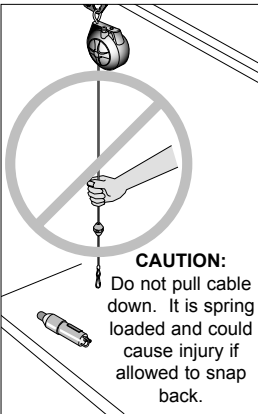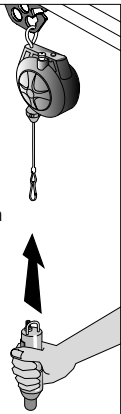


2b

Be sure tool is securely hooked to cable. Do not drop tool. Tool may be heavier than spring can lift before spring is adjusted.

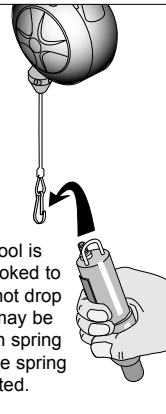


ADJUST TOOL HEIGHT 3a

Determine ideal height for tool when tool is not being used.

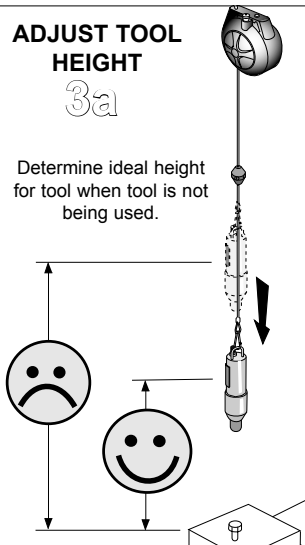


3b

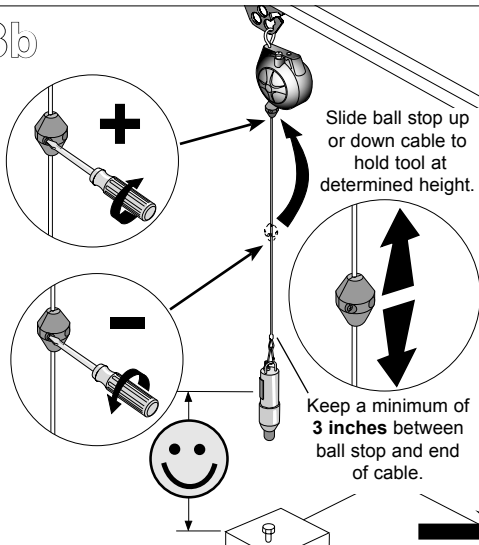


INCREASING LIFT 4

To **INCREASE** spring tension, turn "palm knob" clockwise until tool rises to ball stop.

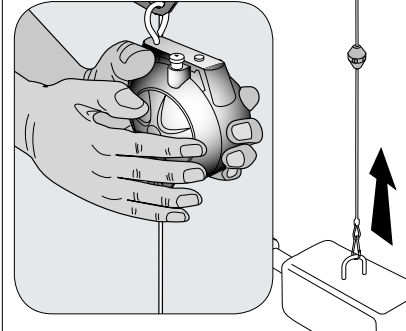

REDUCING LIFT 5

To **DECREASE** spring tension, repeatedly depress button on top of the reel.

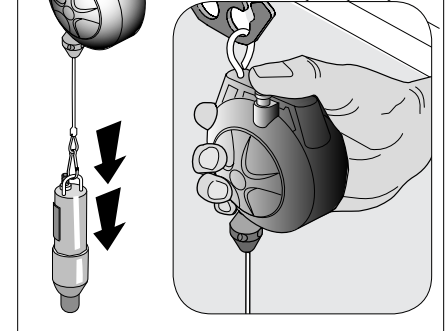


ADJUST DRAG 6

DRAG BRAKE adds friction to the spool and allows you to *fine tune* the reel. Add or subtract friction by turning screw on back of reel.


INCREASE DRAG

DECREASE DRAG

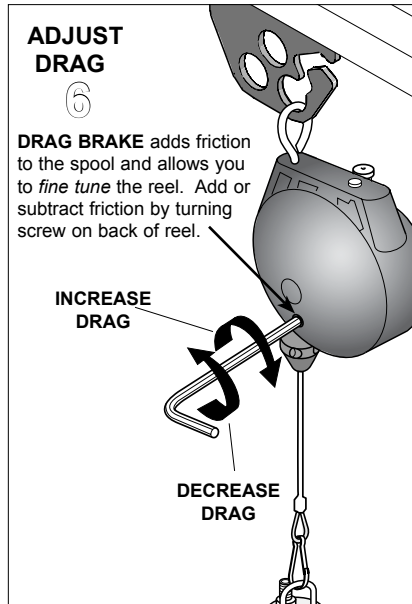

SAFETY FIRST 7

It is recommended that a safety cable be installed to a second support in the unlikely event of failure of the first mounting point.

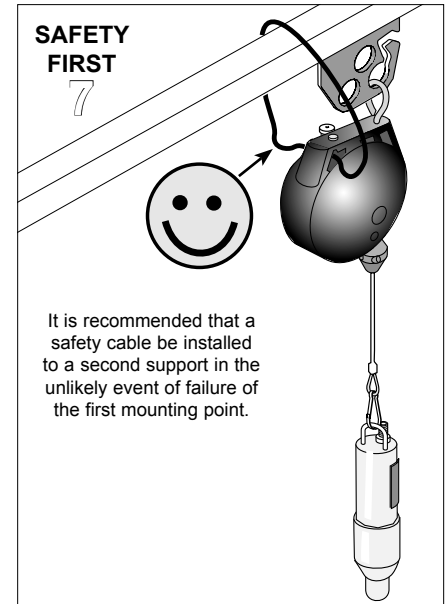

MAINTENANCE:

Periodically inspect cable and hook for wear or looseness. Replace unit if required. Do not lubricate; balance reel is permanently lubricated.

CAUTION:

Do not attempt to remove spring from its canister. Damage or personal injury could result.



Workplace Solutions

Distributed by Tri-State Equipment Company Inc.

Email: sales@tsoverheadcrane.com

Web: www.tsoverheadcrane.com

PH: 314-869-7200 | FAX: 314-869-7226

Printed in U.S.A.

P.O. Box 26 • 600 South Clark St.
Mayville, WI 53050

624130.c